Whirlpool YREX6634RQ0 01 - TOP AND CONSOLE PARTS

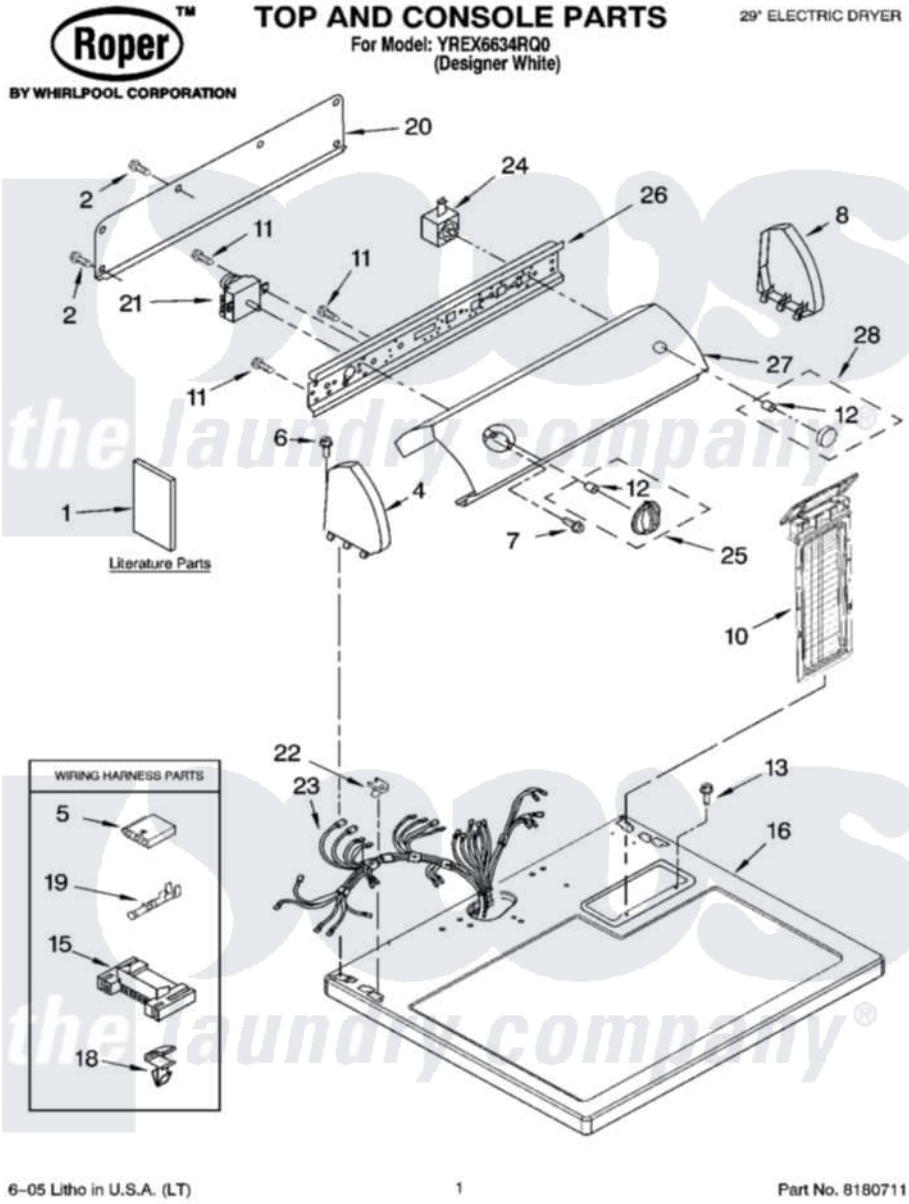

Whirlpool Residential Whirlpool YREX6634RQ0 Dryer Parts Parts Diagram 01 - TOP AND CONSOLE PARTS
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	8533782		Not Available	Guide, Use & Care
"	8535831		Not Available	Instructions, Installation
"	8533780		Not Available	Sheet, Cycle Feature
"	8528188		Not Available	Wiring Diagram
"	BLANK		Not Available	Following May Be Purchased DO-IT-YOURSELF REPAIR MANUALS
"	677818		Not Available	Manual, Do-It- Yourself Repair (Dryer)
2	693995			Screw, Hex Head
4	8274437	279960		Endcap
5	3936144			Do-It-Yourself Repair Manuals
6	388326			Screw, 8-18 X 1.25
7	8533951	3400859		Screw, Grounding
8	8274434	279960		Endcap
10	8558467			Screen, Lint
11	8533971	90767		Screw, 8A X 3/8 HeX Washer Head Tapping

12	8536939			Clip, Knob
13	688983	487240		Screw, For Mtg. Service Capacitor
15	3395683			Receptacle, Multi-Terminal
16	8557930	8563985		Top
18	3394427			Clip-Harness
19	94614			Terminal
20	8274261			Do-It-Yourself Repair Manuals
21	8299781			Timer, 60 Hz
22	357213			Nut, Push-In
23	8299868		Not Available	Harness, Wiring
24	3977456			Switch, Push-To-Start
25	3957383			Timer Knob Assembly
26	8271418			Bracket, Control
27	8573818			Panel, Control
28	8557462			Knob, Push-To-Start

the laundry company®
the laundry company®
the laundry company®